

mawaa®



Dampfbügeleisen

Modell: MI2-2430-BK


Anleitung

Bitte lesen Sie diese Anleitung, bevor Sie das Gerät verwenden

Hauptmerkmale und Aufbau:

Das Produkt verfügt über viele Funktionen wie Temperaturregelung, Sprühfunktion, Trockenbügeln, Dampfbügeln, Extra-Dampfstoß, Selbstreinigungsfunktion, automatische Abschaltung usw.

Es zeichnet sich aus durch: Ein elegantes Design, hohe Energieeffizienz, einfache Bedienung, hervorragende Bügelergebnisse, Zeit- und Kraftersparnis.

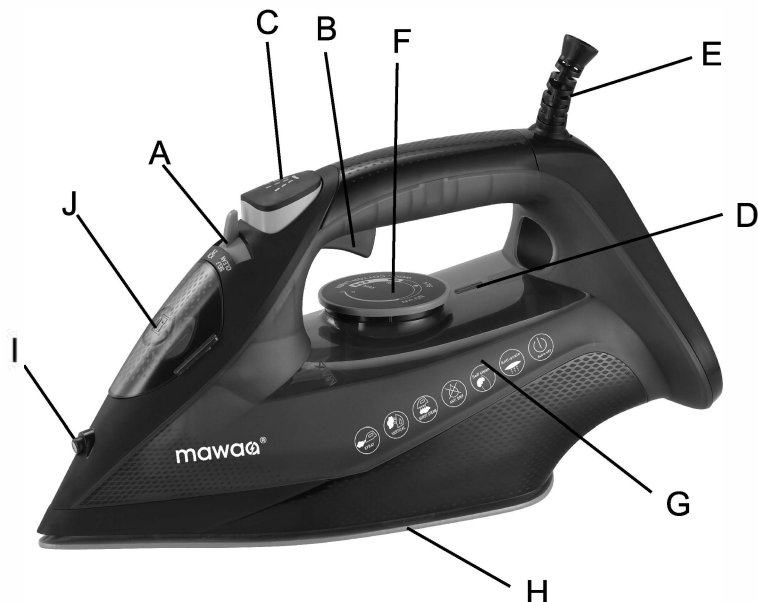

Teilebeschreibung

A: Dampfbügel
B: Dampfstoßknopf
C: Sprühknopf
D: Kontrollleuchte
E: 360° drehbares Kabel
F: Temperaturregler

G: Wassertank
H: Keramikbeschichtete Bügelsohle
I: Sprühdüse
J: Deckel der Wassereinfüllöffnung

Sicherheits- und Nutzungshinweise:

- Nur für den Hausgebrauch bestimmt.
- Nur zum Bügeln von Textilien auf einem Bügelbrett verwenden.
- Niemals Kleidungsstücke am Körper bügeln - Verletzungsgefahr!
- Bügeleisen immer ausschalten, bevor Sie den Netzstecker ein- oder ausstecken.
- Kabel nie am Kabel ziehen, immer am Stecker anfassen.
- Das Kabel darf keine heißen Flächen berühren.
- Eisen vollständig abkühlen lassen, bevor Sie es wegräumen.
- Vor dem Befüllen oder Entleeren immer vom Strom trennen.
- Bei beschädigtem Kabel oder nach Sturz das Gerät nicht mehr verwenden - nur von autorisiertem Service prüfen lassen.
- Nie unbeaufsichtigt lassen, wenn es angeschlossen ist.
- Heißes Wasser oder Dampf kann zu Verbrennungen führen - Vorsicht beim Befüllen oder beim Umdrehen des Bügeleisens.
- Nicht in Richtung Körper dampfen.
- Immer auf stabiler Oberfläche verwenden und abstellen.

Wasser einfüllen:

1. Gerät ausschalten und vom Netz trennen
2. Dampfregler auf „O“ stellen
3. Deckel öffnen und Wasser bis zur „MAX“-Markierung einfüllen
4. Wasserstand im transparenten Bereich sichtbar (bei aufrechtem Bügeleisen)
5. Nach Gebrauch: Wasser ausgießen

Kein parfümiertes oder entkalktes Wasser verwenden.

Trockenbügeln verwenden:

- Bügeleisen senkrecht stellen
- Einstecken
- Dampfregler auf „MIN“
- Vorheizen bis Lampe erlischt

Jetzt kann trocken gebügelt werden

Technische Daten

Modell: MI2-2430-BK

Maximale Leistung: 2400 W

Spannung / Frequenz: 220–240 V ~ 50/60 Hz

Tankvolumen: 350 ml

Farbe: Schwarz

Material: Kunststoff

Produktmaße (L × B × H): 288 × 142 × 150 mm

Nettogewicht: 1,09 kg

Sprühfunktion:

- Vorher Etikett am Kleidungsstück prüfen
- Besonders hilfreich bei starken Falten
- Kann mit oder ohne Dampf genutzt werden
- Einfach Sprühknopf drücken, wenn benötigt

Dampfbügeln:

1. Wasser einfüllen (siehe oben)
2. Temperaturregler auf Dampfbereich stellen
3. Stecker einstecken
4. Vorheizen bis Kontrollleuchte ausgeht
5. Temperatur entsprechend Textilie einstellen

Jetzt kann gedampft werden

Nur bei hoher Temperatur möglich - sonst tropft Wasser aus der Sohle

Dampfstoß-Funktion:

- Für extra Dampf bei hartnäckigen Falten
- Trocken- oder Dampfbügeln nutzbar
- Dampfstoßknopf drücken (ggf. mehrmals)
- Warten Sie einige Sekunden

Nicht mehr als 3 Mal direkt nach Erlöschen der Kontrolllampe drücken

Anti-Kalk-Funktion:

Im Wassertank befindet sich ein System, das Kalk automatisch bindet, um Ablagerungen zu verhindern.

Tropfstopp-Funktion:

Regelt den Wasserfluss zur Sohle, verhindert Tropfen bei niedriger Temperatur.

Automatische Abschaltung:

- Nach ca. 30 Sekunden waagrecht / 8 Minuten senkrecht wird das Gerät automatisch deaktiviert.
- Die Kontrollleuchte blinkt.
- Um das Gerät wieder zu aktivieren: Leicht bewegen oder anheben
- Dann aufheizen lassen bis Lampe erneut ausgeht

Nach jedem Gebrauch:

1. Ausschalten & abstecken
2. Wasser ausgießen
3. Abkühlen lassen
4. Auf fester, kratzfreier Unterlage ablegen
5. Am besten senkrecht stehend platzieren

Außenreinigung:

- Mit feuchtem Tuch abwischen (nach Abkühlung) Bei Bedarf milde
- Seife verwenden
- Keine aggressiven Reiniger oder Scheuermittel verwenden!

Bügelsohle reinigen:

- Rückstände mit feuchtem Tuch abwischen .
- Kein Metallschwamm oder raue Flächen verwenden!
- Bei geschmolzenem Kunststoff: aufheizen & über alten Baumwollstoff bügeln

Keine Dampfreiniger oder chemischen Reiniger verwenden!

Selbstreinigung (einmal pro Monat empfohlen):

1. Tank halb voll mit Wasser füllen
2. Temperatur auf MAX, aufheizen
3. Vom Strom trennen
4. Über dem Waschbecken Selbstreinigungstaste drücken
5. Bügeleisen dabei leicht bewegen, bis Tank leer ist
6. Danach nochmal aufheizen

Restwasser über einem Baumwolltuch verdampfen lassen.

Imported by:
LEFEX GmbH
Parkring 49a
68159 Mannheim
www.mawaa.de
support@mawaa.de





Steam Iron

Model: MI2-2430-BK


User Manual

Please read this manual before using the appliance.

Main Features and Components

The appliance offers multiple functions, including temperature control, spray function, dry ironing, steam ironing, steam boost, self-cleaning and automatic shut-off.

It features an elegant design, high energy efficiency, easy operation, excellent ironing performance, and saves both time and effort.

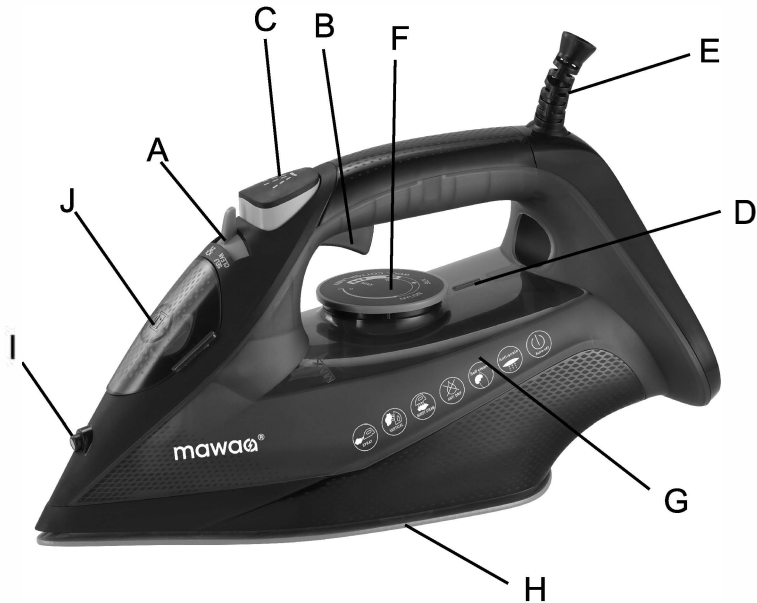

Part Description

A: Steam Control
B: Steam Boost Button
C: Spray Button
D: Indicator Light
E: 360° Swivel Cord
F: Temperature Control

G: Water Tank
H: Ceramic Soleplate
I: Spray Nozzle
J: Water Inlet Cover

Safety Instructions

- For household use only.
- Use only for ironing textiles on an ironing board.
- Never iron garments while they are being worn – risk of injury!
- Always switch off the iron before plugging in or unplugging it.
- Never pull the power cord. Always unplug by holding the plug.
- Do not allow the cord to touch hot surfaces.
- Allow the iron to cool completely before storing.
- Always unplug before filling or emptying the water tank.
- Do not use the appliance if the cord is damaged or if the iron has been dropped. Have it checked by an authorized service center.
- Never leave the appliance unattended while connected to the power supply.
- Hot water and steam may cause burns. Take care when filling the water tank or turning the iron upside down.
- Do not direct steam towards people.
- Always use and place the iron on a stable surface.

Filling the Water Tank

1. Switch off the appliance and unplug it.
2. Set the steam control to "0".
3. Open the water inlet cover and fill the tank up to the "MAX" mark.
4. Check the water level through the transparent water tank (with the iron upright).
5. Empty any remaining water after use.

Do not use perfumed or descaled water.

Dry Ironing

- Place the iron upright.
- Plug in the appliance.
- Set the steam control to "MIN".
- Preheat until the indicator light goes out.

The iron is now ready for dry ironing.

Technical Specifications

Model: MI2-2430-BK

Maximum Power: 2400 W

Voltage / Frequency: 220–240 V ~ 50/60 Hz

Water Tank Capacity: 350 ml

Color: Black

Material: Plastic

Product Dimensions (L × W × H): 288 × 142 × 150 mm

Net Weight: 1.09 kg

Spray Function:

- Check the care label before spraying.
- Ideal for removing stubborn creases.
- Can be used with or without steam.
- Press the spray button when needed.

Steam Ironing:

1. Fill the water tank (see above).
2. Set the temperature control to the steam setting.
3. Plug in the appliance.
4. Preheat until the indicator light goes out.
5. Select the temperature suitable for the fabric

The iron is now ready for steam ironing.

Steam ironing is only possible at higher temperatures. Otherwise, water may drip from the soleplate.

Steam Boost Function:

- For stubborn creases.
- Suitable for dry or steam ironing.
- Press the steam boost button (if necessary, several times).
- Wait a few seconds before pressing again.

Do not press the steam boost button more than three times immediately after the indicator light goes out

Anti-Scale Function:

The water tank is equipped with an anti-scale system to help prevent limescale build-up.

Anti-Drip Function:

Regulates the water flow to the soleplate and prevents dripping at low temperatures.

Auto Shut-Off:

- The appliance switches off automatically after approx. 30 seconds in the horizontal position or 8 minutes in the upright position.
- The indicator light flashes.
- To reactivate the appliance, move or lift it slightly.
- Allow the iron to reheat until the indicator light goes out.

After Each Use:

1. Switch off and unplug the appliance.
2. Empty the water tank.
3. Allow the iron to cool.
4. Place it on a stable, scratch-free surface.
5. Store the iron upright whenever possible.

Cleaning the Exterior:

- Wipe with a damp cloth after the iron has cooled.
- Use mild soap if necessary.
- Do not use abrasive cleaners or scouring agents.

Cleaning the Soleplate:

- Wipe off any residue with a damp cloth.
- Do not use metal scouring pads or abrasive materials.
- If plastic has melted onto the soleplate, heat the iron and iron over an old cotton cloth.

Do not use steam cleaners or chemical cleaners!

Self-Cleaning (Recommended once a month)

1. Fill the water tank halfway.
2. Set the temperature to MAX and allow the iron to heat up.
3. Unplug the appliance.
4. Hold the iron over a sink and press the self-clean button.
5. Gently move the iron until the water tank is empty.
6. Reheat the iron once more.

Allow any remaining water to evaporate by ironing over a cotton cloth.

Imported by:
LEFEX GmbH
Parkring 49a
68159 Mannheim
www.mawaa.de
support@mawaa.de





Steam Iron

Model: MI2-2430-BR


User Manual

Please read this manual before using the appliance.

Main Features and Components

The appliance offers multiple functions, including temperature control, spray function, dry ironing, steam ironing, steam boost, self-cleaning and automatic shut-off.

It features an elegant design, high energy efficiency, easy operation, excellent ironing performance, and saves both time and effort.

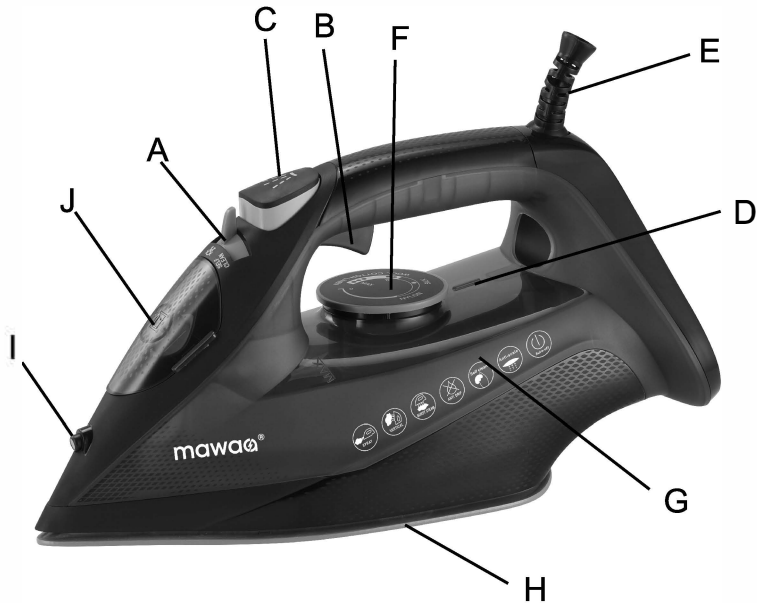

Part Description

A: Steam Control
B: Steam Boost Button
C: Spray Button
D: Indicator Light
E: 360° Swivel Cord
F: Temperature Control

G: Water Tank
H: Ceramic Soleplate
I: Spray Nozzle
J: Water Inlet Cover

Safety Instructions

- For household use only.
- Use only for ironing textiles on an ironing board.
- Never iron garments while they are being worn – risk of injury!
- Always switch off the iron before plugging in or unplugging it.
- Never pull the power cord. Always unplug by holding the plug.
- Do not allow the cord to touch hot surfaces.
- Allow the iron to cool completely before storing.
- Always unplug before filling or emptying the water tank.
- Do not use the appliance if the cord is damaged or if the iron has been dropped. Have it checked by an authorized service center.
- Never leave the appliance unattended while connected to the power supply.
- Hot water and steam may cause burns. Take care when filling the water tank or turning the iron upside down.
- Do not direct steam towards people.
- Always use and place the iron on a stable surface.

Filling the Water Tank

1. Switch off the appliance and unplug it.
2. Set the steam control to "0".
3. Open the water inlet cover and fill the tank up to the "MAX" mark.
4. Check the water level through the transparent water tank (with the iron upright).
5. Empty any remaining water after use.

Do not use perfumed or descaled water.

Dry Ironing

- Place the iron upright.
- Plug in the appliance.
- Set the steam control to "MIN".
- Preheat until the indicator light goes out.

The iron is now ready for dry ironing.

Technical Specifications

Model: MI2-2430-BR

Maximum Power: 2400 W

Voltage / Frequency: 220–240 V ~ 50/60 Hz

Water Tank Capacity: 350 ml

Color: Black

Material: Plastic

Product Dimensions (L × W × H): 288 × 142 × 150 mm

Net Weight: 1.09 kg

Spray Function:

- Check the care label before spraying.
- Ideal for removing stubborn creases.
- Can be used with or without steam.
- Press the spray button when needed.

Steam Ironing:

1. Fill the water tank (see above).
2. Set the temperature control to the steam setting.
3. Plug in the appliance.
4. Preheat until the indicator light goes out.
5. Select the temperature suitable for the fabric

The iron is now ready for steam ironing.

Steam ironing is only possible at higher temperatures. Otherwise, water may drip from the soleplate.

Steam Boost Function:

- For stubborn creases.
- Suitable for dry or steam ironing.
- Press the steam boost button (if necessary, several times).
- Wait a few seconds before pressing again.

Do not press the steam boost button more than three times immediately after the indicator light goes out

Anti-Scale Function:

The water tank is equipped with an anti-scale system to help prevent limescale build-up.

Anti-Drip Function:

Regulates the water flow to the soleplate and prevents dripping at low temperatures.

Auto Shut-Off:

- The appliance switches off automatically after approx. 30 seconds in the horizontal position or 8 minutes in the upright position.
- The indicator light flashes.
- To reactivate the appliance, move or lift it slightly.
- Allow the iron to reheat until the indicator light goes out.

After Each Use:

1. Switch off and unplug the appliance.
2. Empty the water tank.
3. Allow the iron to cool.
4. Place it on a stable, scratch-free surface.
5. Store the iron upright whenever possible.

Cleaning the Exterior:

- Wipe with a damp cloth after the iron has cooled.
- Use mild soap if necessary.
- Do not use abrasive cleaners or scouring agents.

Cleaning the Soleplate:

- Wipe off any residue with a damp cloth.
- Do not use metal scouring pads or abrasive materials.
- If plastic has melted onto the soleplate, heat the iron and iron over an old cotton cloth.

Do not use steam cleaners or chemical cleaners!

Self-Cleaning (Recommended once a month)

1. Fill the water tank halfway.
2. Set the temperature to MAX and allow the iron to heat up.
3. Unplug the appliance.
4. Hold the iron over a sink and press the self-clean button.
5. Gently move the iron until the water tank is empty.
6. Reheat the iron once more.

Allow any remaining water to evaporate by ironing over a cotton cloth.

Imported by:
LEFEX GmbH
Parkring 49a
68159 Mannheim
www.mawaa.de
support@mawaa.de

