



Bedienungsanleitung

Wäschetrockner

Modell: MDR-12608-WH



Achtung: Lesen und befolgen Sie vor der ersten Inbetriebnahme alle Sicherheits- und Bedienungshinweise.

Inhalt

Warnhinweise	2-4
Produktübersicht	5
Installationsanleitung	6-8
Schnellstart	9
Funktions- und Programmübersicht	10-12
Bedienungsanleitung	13
Wartung und Pflege	14-15
Fehlerbehebung	16-17
Technische Daten und Schaltplan	18

WARNUNG

● **Sicherheitshinweise**

Tipp

Diese Bedienungsanleitung enthält wichtige Informationen zur Installation, Verwendung und Wartung des Geräts. Lesen Sie diese Anleitung sorgfältig durch, um den Wäschetrockner korrekt zu verwenden und seine Lebensdauer zu verlängern. Schäden oder Fehlfunktionen, die durch die Nichtbeachtung der Installations- und Bedienungsanweisungen entstehen, sind nicht durch die Herstellergarantie abgedeckt. Der Hersteller übernimmt keine Haftung für daraus resultierende Schäden oder Verluste.

● **Warnhinweise**

- Ziehen Sie während des Betriebs nicht den Netzstecker und schalten Sie die Stromversorgung nicht aus. Wenn das Gerät nicht verwendet oder gereinigt wird, ziehen Sie den Netzstecker. Ziehen Sie dabei nicht am Netzkabel. Berühren Sie den Netzstecker nicht mit nassen Händen.
- Der Wäschetrockner darf nicht im Freien oder in feuchter Umgebung aufgestellt werden. Sollte Wasser auf das Gerät gelangen oder in das Gerät eindringen, muss es vor der Inbetriebnahme vollständig trocknen.
- Nasse Wäsche sollte vor dem Trocknen geschleudert werden. Dadurch wird verhindert, dass Wasser auf elektrische Bauteile gelangt und Schäden oder Gefahren verursacht.
- Stellen Sie den Wäschetrockner an einem gut belüfteten Ort auf.
- Verwenden Sie während des Betriebs keine brennbaren Sprays in der Nähe des Geräts. Bei Gasgeruch oder austretendem Gas darf das Gerät nicht ein- oder ausgeschaltet und der Netzstecker nicht gezogen werden.
- Kleidung, die mit brennbaren Reinigungsmitteln, Lösungsmitteln, Benzin, Bananenöl oder ähnlichen Chemikalien behandelt wurde, darf nicht im Gerät getrocknet werden.
- Zerlegen, reparieren oder verändern Sie das Gerät nicht selbst.
- Aus Sicherheitsgründen dürfen Kinder sowie Personen mit eingeschränkten körperlichen oder geistigen Fähigkeiten das Gerät nicht unbeaufsichtigt benutzen.
- Benutzen Sie das Gerät nicht mit nassen Händen oder Füßen.
- Regenbekleidung, Fahrradabdeckungen sowie Gegenstände aus Gummi oder ähnlichen elastischen Materialien dürfen nicht im Wäschetrockner getrocknet werden.

WARNUNG

● **Warnhinweise**

- Stellen Sie keine heißen oder schweren Gegenstände (z. B. einen Topf mit heißem Wasser) auf den Wäschetrockner.
- Lagern Sie keine Zigaretten, Feuerzeuge, Trockeneis, Benzin oder andere brennbare bzw. explosive Stoffe im Wäschetrockner.
- Die Tür des Wäschetrockners darf erst nach Programmende geöffnet werden. Öffnen Sie die Tür nicht gewaltsam vorzeitig, da dies aufgrund hoher Temperaturen zu Verbrennungen führen kann.

● **Warnsymbole für den Wäschetrockner**

Kleidungsstücke, die laut Pflegekennzeichnung nicht für den Trockner geeignet sind, dürfen nicht im Wäschetrockner getrocknet werden.

● **Sicherheitshinweise**

 Um Personen- und Sachschäden zu vermeiden, beachten Sie bitte die folgenden Hinweise:

- Dieses Gerät ist ein elektrisches Gerät der Schutzklasse I.

1. Es muss eine ordnungsgemäß geerdete Stromversorgung verwendet werden. Die Erdungsleitung darf nicht an Wasserleitungen, Gasleitungen oder ähnliche Installationen angeschlossen werden.
2. Der Leitungsquerschnitt der Stromversorgung muss für die elektrische Belastung des Geräts ausgelegt sein.
3. Verwenden Sie für dieses Gerät eine eigene Steckdose. Entspricht die Elektroinstallation Ihres Haushalts nicht diesen Anforderungen, darf das Gerät nicht verwendet werden.
4. Die Steckdose sowie die Erdungsverbindung müssen von einer fachkundigen Elektrofachkraft installiert werden.
5. Wird eine Beschädigung des Netzkabels festgestellt, darf dieses ausschließlich durch qualifiziertes Fachpersonal ersetzt werden.


WARNUNG

● **Sicherheitshinweise**


6. Verbinden Sie die Erdungsleitung niemals mit dem Außenleiter (L) oder dem Neutraleiter (N). Andernfalls kann das Gehäuse unter Spannung stehen und die Gefahr eines Stromschlags besteht.
 7. Wird der Wäschetrockner längere Zeit nicht benutzt, sollte der Netzstecker aus der Steckdose gezogen werden.
 8. Dieses Gerät wird mit Wechselstrom betrieben. Liegt die Netzspannung innerhalb von $\pm 10\%$ des Nennwerts, kann das Gerät ordnungsgemäß verwendet werden.
 9. Wird ein Fehlerstromschutzschalter (RCD) verwendet, müssen Stecker und Steckdose kompatibel sein.
- Verwenden Sie aus Sicherheitsgründen ausschließlich Originalteile und Zubehör des Herstellers.
 - Kann der Wäschetrockner nicht mehr verwendet werden, ziehen Sie den Netzstecker, trennen Sie das Netzkabel und machen Sie die Türverriegelung unbrauchbar. Altgeräte sind gemäß den örtlichen Vorschriften zu entsorgen.
 - Kleidungsstücke, die laut Material- oder Pflegekennzeichnung nicht für die Trocknung im Wäschetrockner geeignet sind, dürfen nicht im Gerät getrocknet werden.
 - Trocknen Sie keine ungewaschene Wäsche.
 - Betreiben Sie das Gerät nicht in Umgebungen mit brennbarem Staub (z. B. Kohlenstaub).
 - Lehnen Sie sich nicht an die Gerätetür und steigen oder setzen Sie sich nicht auf den Wäschetrockner.
 - Bei Umgebungstemperaturen unter $0\text{ }^{\circ}\text{C}$ können Frostschäden auftreten.
 - Lassen Sie Kinder nicht mit Verpackungsmaterial spielen.

Produktübersicht

● Zubehör

Stahlhalterung	Externer Ablaufschlauch	Kunststoffhalterung
<small>*Nur bei Modellen mit Trockenständer und Halterung.</small>	<small>*Nur bei Modellen mit Trockenständer und Halterung.</small>	<small>*Nur bei Modellen mit Trockenständer und Halterung.</small>
		

● Geräteübersicht

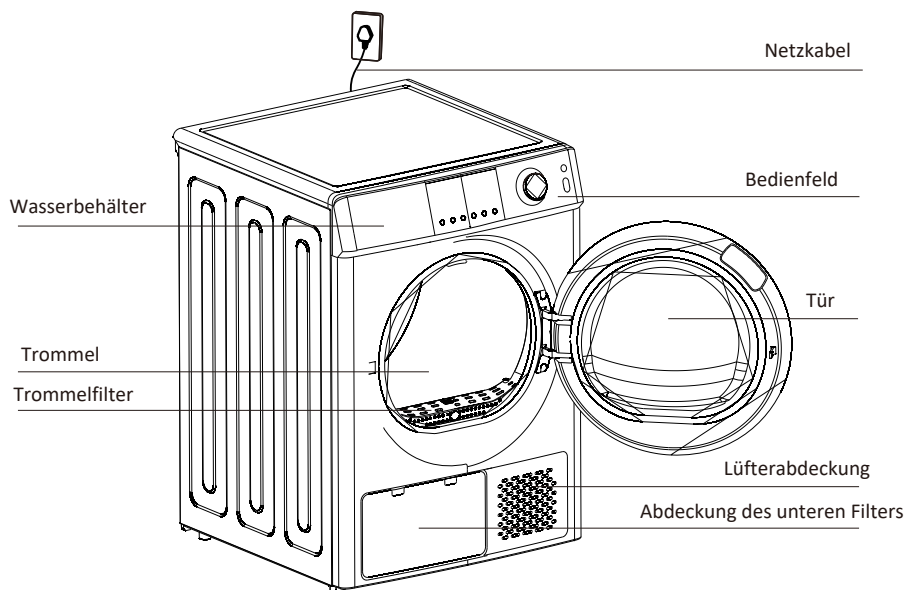


Hinweis: Diese Abbildung dient nur zur Veranschaulichung.
Maßgeblich ist das tatsächliche Produkt.

Installationsanleitung

● Aufstellen des Wäschetrockners

1. Es wird empfohlen, den Wäschetrockner auf einer festen und ebenen Fläche aufzustellen.
2. Um ein Verstopfen der Lüfterabdeckung durch Staubansammlungen zu vermeiden, darf der Wäschetrockner nicht an stark staubigen Orten aufgestellt werden.
3. Entfernen Sie sämtliche Verpackungsmaterialien und stellen Sie das Gerät auf eine feste und ebene Fläche. Stellen Sie es nicht auf Teppiche oder Gestelle.
4. Richten Sie den Wäschetrockner über die Stellfüße waagrecht aus. Füllen Sie den Abstand zwischen Füßen und Boden nicht mit Teppichen, Holzleisten oder ähnlichen Materialien aus, da dies den Betrieb beeinträchtigen kann.
5. Der Aufstellort muss mindestens 5 cm von Möbeln oder Wänden entfernt sein.

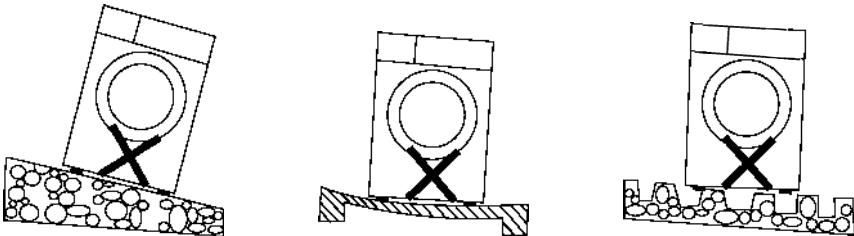


● Nivellierung

Richten Sie den Wäschetrockner durch Verstellen der Stellfüße waagrecht aus.

1. Die Höhe kann durch Drehen der Stellfüße angepasst werden.
2. Zur Einstellung der Stellfüße können geeignete Werkzeuge verwendet werden.

Hinweis: Verwenden Sie einen Schraubendreher mit einem Durchmesser von weniger als 4,5 mm zur Einstellung der Stellfüße.

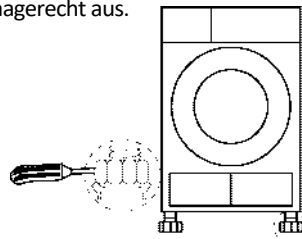

● Stromanschluss

1. Stellen Sie sicher, dass die Netzspannung den Angaben auf dem Typenschild entspricht.
2. Verwenden Sie keine Mehrfachsteckdosen oder Universaladapter.


Installationsanleitung

● Zubehör montieren

(Das Zubehör wird nur bei Bedarf montiert. Der Wäschetrockner kann auch ohne Zubehör normal verwendet werden.)

(1) Externen Ablaufschlauch montieren

(Falls erforderlich. Wird kein externer Ablaufschlauch verwendet, wird der Wasserbehälter genutzt.)

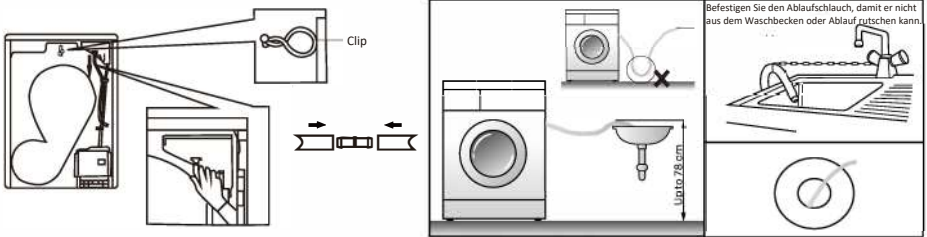

1. Ziehen Sie den oberen Ablaufschlauch nach unten heraus.
2. Verbinden Sie den oberen Ablaufschlauch mit dem externen Ablaufschlauch.
3. Befestigen Sie den externen Ablaufschlauch am Clip.


Führen Sie den externen Ablaufschlauch in ein Waschbecken oder einen Bodenablauf.

(Der Ablaufschlauch darf nicht geknickt werden.)

Achtung: Stellen Sie sicher, dass der Ablaufschlauch weder geknickt noch verstopft ist.

Installationsanleitung

● Zubehör montieren

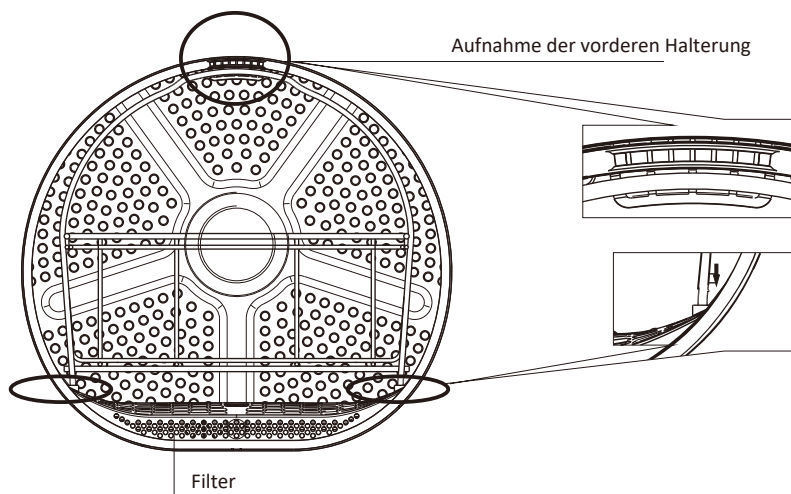

Montieren Sie zunächst die Stahlhalterung gemäß Schritt 2 und setzen Sie anschließend die Kunststoffhalterung auf die Stahlhalterung.


*Nur für Modelle mit Trockenständer und Halterung.

Schnellstart


Hinweis:

Vergewissern Sie sich vor der Verwendung, dass der Wäschetrockner gemäß den Installationsanweisungen korrekt aufgestellt wurde.

Schritt 1: Wäsche vorbereiten

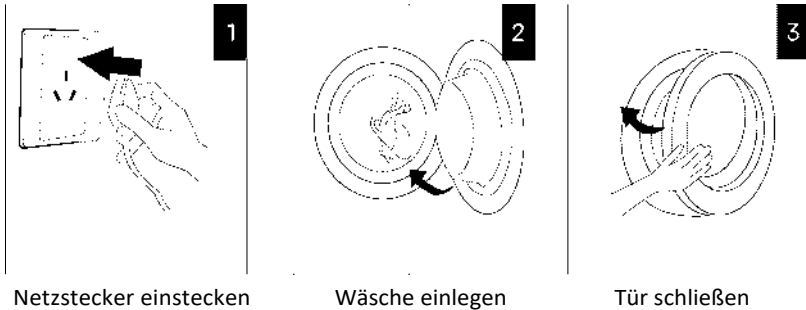


Schritt 2: Trocknung starten



Schritt 3: Trocknung beenden

Nach Abschluss des Trockenvorgangs ertönt ein Signalton oder im Display wird „End“ angezeigt.

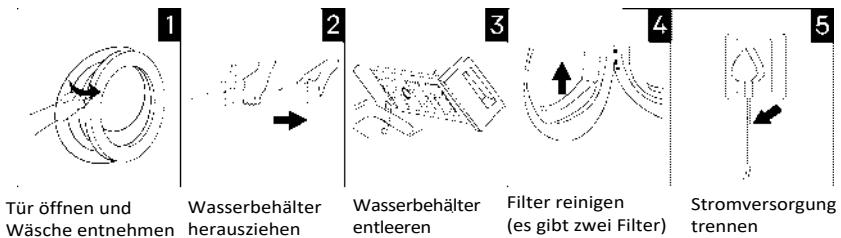


Hinweis:

1. Bei Verwendung einer Steckdose mit Schalter kann die Stromversorgung direkt über den Schalter ausgeschaltet werden.
2. Entleeren Sie den Wasserbehälter direkt, ohne weitere Teile zu öffnen.

Funktions- und Programmübersicht

● Funktionen des Bedienfelds

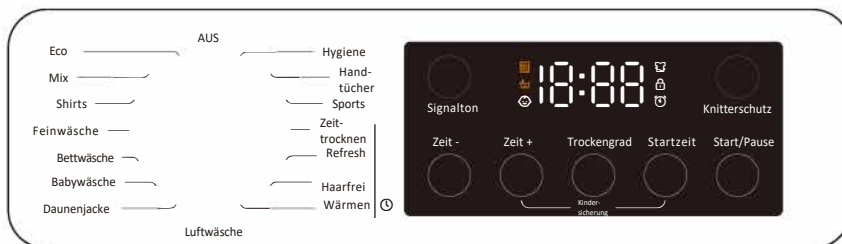

1. Start/Pause

Drücken Sie die Taste „Start/Pause“, um das Programm zu starten oder zu unterbrechen.

2. Delay

Drücken Sie die Taste „Startzeitvorwahl“, um die Zeitvorwahl einzustellen. Drücken Sie die Taste erneut, um die gewünschte Verzögerungszeit auszuwählen. Drücken Sie anschließend „Start/Pause“, um die Zeitvorwahl zu aktivieren. Die Zeitvorwahl muss nach der Programmauswahl und vor dem Drücken der Taste „Start/Pause“ eingestellt werden. Nach Aktivierung der Zeitvorwahl sind alle Tasten außer „Start/Pause“ gesperrt.

3. Dry Level

Drücken Sie die Taste „Trocknungsgrad“, um den gewünschten Trocknungsgrad auszuwählen. Je nach Programm stehen unterschiedliche Einstellmöglichkeiten zur Verfügung. Bei Zeitprogrammen kann kein Trocknungsgrad gewählt werden. Es stehen drei Trocknungsgrade zur Verfügung:

L1 (Trocken)

L2 (Schranktrocken)

L3 (Extra Trocken)

4. Time-, time+

Dient zur Einstellung der Trocknungszeit. Je nach Programm stehen unterschiedliche Zeitbereiche zur Verfügung. Bei einigen Programmen kann die Trocknungszeit nicht verändert werden.

5. Child lock

Um Fehlbedienungen durch Kinder zu verhindern, kann die Kindersicherung aktiviert werden. Halten Sie während des Betriebs die Tasten „Zeit+“ und „Startzeitvorwahl“ gleichzeitig gedrückt, um die Kindersicherung zu aktivieren. Die Kontrollanzeige der Kindersicherung leuchtet auf. Zum Deaktivieren die beiden Tasten erneut gleichzeitig drücken. Bei aktivierter Kindersicherung sind alle Tasten gesperrt.

● Funktions- und Programmübersicht

 Filteranzeige: Erinnert den Benutzer daran, den Filter zu reinigen.

 Anzeige Wasserbehälter: Erinnert den Benutzer daran, den Wasserbehälter zu entleeren.

- Wäsche nachlegen: Drücken Sie während des Trocknungsvorgangs die Taste „Start/Pause“. Der Wäschetrockner wird angehalten und die Tür kann geöffnet werden, um Wäsche nachzulegen.
- Die Startzeitvorwahl bezeichnet den Zeitraum vom Beginn der Vorwahl bis zum Ende des Trocknungsprogramms.
- Nach Abschluss des Programms wird „End“ angezeigt und ein Signalton ausgegeben. Erfolgt innerhalb von 10 Minuten keine Bedienung, wechselt das Gerät automatisch in den Knitterschutzmodus. Nach Beendigung des Knitterschutzes schaltet sich das Gerät automatisch aus. Wird im Zustand „End“ die Tür geöffnet, wechselt das Gerät direkt in den ausgeschalteten Zustand und gibt einen Signalton aus.

Funktions- und Programmübersicht

Die folgenden Programme gelten für Modelle mit 8,0 kg Fassungsvermögen:

Name	Beladung (kg)	Beschreibung
AUS	--	Wäschetrockner ausschalten
ECO	8.0kg	Baumwollwäsche trocknen
MIX	4.0kg	Mischgewebe aus Baumwolle und Synthetik
Hemden	1.0kg	Hemden trocknen
Daunenjacke	1.5kg	Daunenjacken und Daunendecken trocknen
Feinwäsche	3.0kg	Seide und andere hitzeempfindliche Textilien
Hygiene	<3.0kg	Für länger gelagerte Kleidung zur hygienischen Auffrischung
Zeitprogramm	--	Zeitgesteuertes Programm
Warme Kleidung	Geringe Menge	Zeitprogramm zum Anwärmen von Kleidung
Bettwäsche	4.0kg	Für große Wäschestücke wie Bettwäsche
Babykleidung	1.0kg	Baumwollkleidung für Babys trocknen
Luftwäsche	Geringe Menge	Auffrischen mit warmer Luft
Handtücher	3.0kg	Handtücher trocknen
Sport	Geringe Menge	Für atmungsaktive Sportbekleidung
Auffrischen	Geringe Menge	Zeitprogramm zum Auffrischen
Flusen entfernen	Geringe Menge	Zeitprogramm zur Flusenentfernung

Hinweise:

1. Die angegebenen Programme sind Empfehlungen. Wählen Sie das passende Programm entsprechend der Textilart und Ihren Anforderungen.
2. Zeitprogramme erkennen die Restfeuchte nicht automatisch. Ist die Wäsche nach Programmende noch feucht, wiederholen Sie das Programm oder verlängern Sie die Trocknungszeit.
3. Große Textilien wie Bettwäsche oder Vorhänge können sich während des Trocknens zusammenrollen. Unterbrechen Sie das Programm gegebenenfalls, schütteln Sie die Textilien auf und setzen Sie den Trocknungsvorgang fort.
4. Bei Daunenjacken sollte die Innenseite vor dem Trocknen nach außen gedreht werden.
5. Die angezeigte Zeit ist ein Richtwert. Umgebungstemperatur, Luftfeuchtigkeit, Textilart und Beladungsmenge können die tatsächliche Trocknungszeit beeinflussen.

Während des Betriebs erfasst der Feuchtigkeitssensor die Restfeuchte der Wäsche und passt die Trocknungszeit automatisch an. Eine Veränderung der angezeigten Restzeit ist daher normal.

6. Programme mit dem ⌚ Symbol für Zeitprogramme enden automatisch nach Ablauf der eingestellten Zeit.

Bedienungsanleitung

● Vorbereitungen vor dem Trocknen

Hinweis



Nach dem Transport muss das Gerät vor der ersten Inbetriebnahme mindestens 2 Stunden aufrecht stehen. Reinigen Sie die Trommel vor der ersten Verwendung mit einem weichen Tuch.

a) Legen Sie einige Stoffstücke in die Trommel.

b) Schließen Sie das Gerät an die Stromversorgung an und drücken Sie die Taste „Ein/Aus“.

c) Wählen Sie das Programm „Zeitprogramm“ und drücken Sie die Taste „Start/Pause“.

d) Reinigen Sie nach Programmende den Filter gemäß den Anweisungen im Abschnitt „Reinigung und Wartung“.



Während des Betriebs können vom Kompressor und der Ablaufpumpe Geräusche ausgehen. Dies ist normal.

● Hinweise zur Verwendung des Wäschetrockners

1. Schleudern Sie die Wäsche vor dem Trocknen. Je trockener die Wäsche ist, desto weniger Zeit und Energie werden benötigt.

2. Schütteln Sie die Wäsche auf, schließen Sie Reißverschlüsse und Knöpfe und legen Sie die Wäsche anschließend in den Trockner. Um Geräusche durch Reißverschlüsse oder Knöpfe zu vermeiden, drehen Sie die Kleidungsstücke vor dem Trocknen auf links.

3. Reinigen Sie den Filter vor jedem Trocknungsvorgang.

4. Wählen Sie das passende Programm entsprechend Materialart und Pflegekennzeichnung der Textilien.

5. Für optimale Ergebnisse sollten möglichst keine Textilien mit unterschiedlicher Dicke oder unterschiedlichem Feuchtigkeitsgrad gemeinsam getrocknet werden.

6. Bei kleinen Wäschemengen wird die Verwendung eines Zeitprogramms empfohlen.

7. Bettwäsche, Vorhänge und andere große Textilien können sich während des Trocknens zusammenrollen. Unterbrechen Sie in diesem Fall das Programm, lockern Sie die Textilien auf und setzen Sie den Trocknungsvorgang fort.

8. Für Textilien, die im Wäschetrockner getrocknet werden, wird die Verwendung von Weichspüler beim Waschen empfohlen.

9. Schwere Textilien wie Jeans oder große Handtücher können aufgrund ihrer Materialeigenschaften stellenweise feucht bleiben. Ist die Wäsche nach Programmende noch nicht vollständig trocken, verwenden Sie das Zeitprogramm und verlängern Sie die Trocknungszeit.


Wartung und Pflege

● Reinigung und Wartung

a) Wasserbehälter entleeren

Vorgehensweise:

- (1) Wasserbehälter mit beiden Händen greifen und herausziehen.
- (2) Wasser aus dem Wasserbehälter entleeren.
- (3) Wasserbehälter wieder einsetzen.

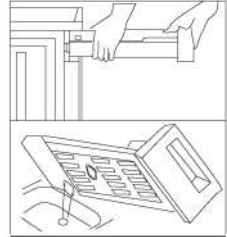


WARNUNG

- Entleeren Sie den Wasserbehälter nach jedem Gebrauch.
- Ist der Wasserbehälter während des Trocknungsvorgangs voll, wird das Programm angehalten und die Anzeige des Wasserbehälters leuchtet auf. Leeren Sie den Wasserbehälter und drücken Sie anschließend die Taste „Start/Pause“, um den Trocknungsvorgang fortzusetzen.
- Betreiben Sie den Wäschetrockner nicht ohne Wasserbehälter.

b) Filter reinigen

Je nach Modell verfügt das Gerät über einen oder zwei Filter. Die Filter müssen nach jedem Gebrauch gereinigt werden. Trommelfilter reinigen:

Tür öffnen → Trommelfilter herausnehmen → Trommelfilter öffnen
→ Trommelfilter reinigen → Trommelfilter wieder einsetzen

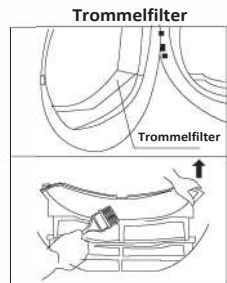

Reinigung:

- (1) Filter und Lüftungsöffnungen reinigen, Flusen entfernen und anschließend unter fließendem Wasser abspülen oder mit einer weichen Bürste reinigen.
- (2) Vor dem Wiedereinsetzen sicherstellen, dass der Filter vollständig trocken ist.

Wartung und Pflege

WARNUNG

- Eine starke Flusenansammlung am Filter behindert die Luftzirkulation. Dies verlängert die Trocknungszeit und erhöht den Energieverbrauch.

- Betreiben Sie den Wäschetrockner niemals ohne Filter.
- Reinigen Sie den Filter nach jedem Gebrauch.

c) Wärmetauscher reinigen

- Es wird empfohlen, den Wärmetauscher bei Bedarf einmal pro Monat zu reinigen.

Reinigung:



- (1) Öffnen Sie die Abdeckung des unteren Filters unten links am Gerät.
- (2) Drehen Sie den Drehverschluss und entnehmen Sie den unteren Filter.
- (3) Reinigen Sie den Wärmetauscher mit einer weichen Bürste.
- (4) Setzen Sie nach der Reinigung den unteren Filter, den Drehverschluss und die Abdeckung wieder ein.

Hinweis:

1. Üben Sie bei der Reinigung des Wärmetauschers keinen starken Druck aus, da dieser beschädigt werden kann.
2. Trennen Sie vor der Reinigung die Stromversorgung.

d) Trommel reinigen

- Trennen Sie vor der Reinigung die Stromversorgung.
- Tragen Sie bei der Reinigung Schutzhandschuhe.
- Verwenden Sie zur Reinigung der Geräteoberfläche und anderer Teile ein mit klarem Wasser angefeuchtetes Tuch. Andernfalls können Kunststoffoberflächen oder andere Bauteile beschädigt werden.
- Reinigen Sie den Wäschetrockner niemals direkt mit einem Wasserschlauch oder Hochdruckreiniger.
- Prepare a wet cloth soaked in clean water.
- Clean the door, especially the internal windows.
- Ein weiches Tuch mit klarem Wasser anfeuchten.
- Die Tür reinigen, insbesondere die Innenseite des Sichtfensters.
- Die Dichtung im Türbereich reinigen.
- Den Feuchtigkeitssensor in der Trommel reinigen.
- Flusen aus den Luftkanälen entfernen. Vor der erneuten Inbetriebnahme alle gereinigten Bereiche mit einem weichen Tuch trocknen.

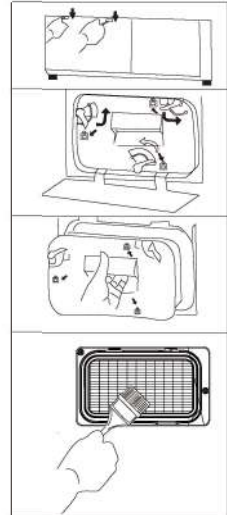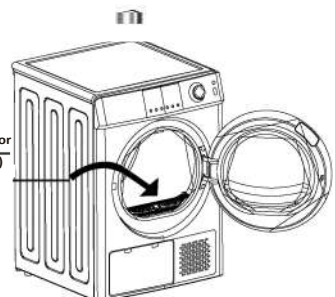

Fehlerbehebung

● Reinigung und Wartung

Hinweis: Der Feuchtigkeitssensor befindet sich in der Trommel unterhalb der Filteröffnung. Reinigen Sie die Trommel nicht mit aggressiven Reinigungsmitteln und beschädigen Sie den Feuchtigkeitssensor nicht.

● Alarmmeldungen

Alarm	Ursache	Lösung
OE	Wasserbehälter voll oder Ablaufpumpe fehlerhaft	Wenn das Problem nach dem Entleeren des Wasserbehälters weiterhin besteht, wenden Sie sich an den Kundendienst.
dE	Tür nicht oder nicht vollständig geschlossen	Schließen Sie die Tür erneut. Besteht der Fehler weiterhin, wenden Sie sich an den Kundendienst.
LE	Filtersieb nicht gereinigt oder Motorfehler	Reinigen Sie das Filtersieb. Besteht der Fehler weiterhin, wenden Sie sich an den Kundendienst.
HE	Kompressorfehler	Schalten Sie das Gerät aus und wenden Sie sich an den Kundendienst.
tE1	Temperatur im vorderen Luftkanal fehlerhaft	
tE2	Temperatur des Kondensators fehlerhaft	
SE	Feuchtigkeitssensor fehlerhaft	

Hinweise:

Wenn  während des Betriebs angezeigt wird, prüfen Sie, ob der Wasserbehälter voll ist. Ist dies der Fall, entleeren Sie ihn und starten Sie das Gerät erneut. Andernfalls starten Sie das Gerät erneut.

Wenn  während des Betriebs angezeigt wird, prüfen Sie, ob das Trommelfiltersieb und das untere Filtersieb verschmutzt sind. Entfernen Sie gegebenenfalls die Flusen und starten Sie das Gerät erneut. Besteht der Fehler weiterhin, wenden Sie sich an den Kundendienst.

Fehlerbehebung

● Fehlerbilder und Abhilfemaßnahmen

 Reparaturen am Wäschetrockner dürfen ausschließlich von autorisierten Fachkräften durchgeführt werden!

Bevor Sie den Kundendienst kontaktieren, prüfen Sie bitte zunächst, ob Sie die Störung selbst beheben können oder ob das Gerät ordnungsgemäß verwendet wurde. Innerhalb der Garantiezeit erhalten Sie vom Kundendienst entsprechende Unterstützung.


Problem	Lösung
Display zeigt keine Anzeige	<ul style="list-style-type: none">• Prüfen Sie, ob Netzspannung und Netzstecker in Ordnung sind.• Prüfen Sie, ob das Gerät eingeschaltet ist.
Wäschetrockner startet nicht	<ul style="list-style-type: none">• Prüfen Sie, ob die Gerätetür vollständig geschlossen ist.• Prüfen Sie, ob ein Programm ausgewählt und die Taste „Start/Pause“ gedrückt wurde.
Tür öffnet sich während des Betriebs	<ul style="list-style-type: none">• Drücken Sie die Tür am Griff fest zu, damit die Verriegelung korrekt einrastet.
Wäsche wird nicht vollständig trocken bzw. Trockenzeit ist zu lang	<ul style="list-style-type: none">• Prüfen Sie, ob das Gerät überladen ist.• Reinigen Sie Trommelfiltersieb und unteres Filtersieb.• Wählen Sie ein geeigneteres Trockenprogramm.• Stellen Sie sicher, dass die Lüftungsöffnung nicht blockiert ist.

 Lässt sich die Störung nicht beheben:

1. Schalten Sie den Wäschetrockner aus.
2. Wenden Sie sich an unseren Kundendienst.

Technische Daten und Schaltplan

Modell	MDR-12608-WH
Max. Trocknungskapazität (kg)	8.0
Nennleistung (W)	650
Geräteabmessungen (B × T × H)	595*615*850
Kältemittel	R290
Füllmenge Kältemittel (g)	Siehe Typenschild

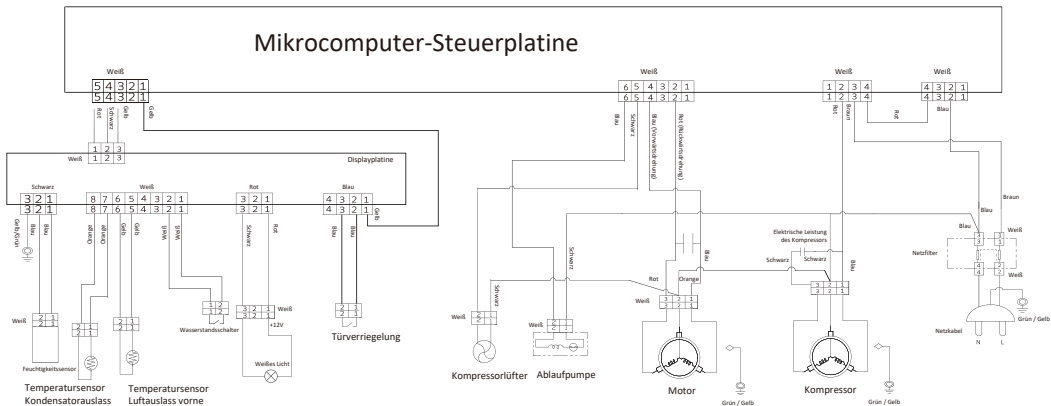

- ◇ : Anschlussklemme (#250)
- ◇ : Anschlussklemme + Steckverbinder
- ⊕ : Erdungsklemme

mawa®

Imported by
LEFEX GmbH
Parking 49a
68159 Mannheim
Germany





User Manual

Heat Pump Tumble Dryer

Model: MDR-12608-WH



Caution: Read and follow all safety and operating instruction before first use of this product.

Content

Warning	2-4
Product Overview.....	5
Installation Instruction	6-8
Quick start	9
The Introduction of Function and Program	10-12
Instructions for use	13
Service guide	14-15
Troubleshooting Guide	16-17
Specification and Circuit diagram	18

WARNING

● **Safety precautions**

Tips

This user's manual includes important information about installing, using and maintaining the machine. Please read the manual carefully so that you can use the clothes dryer correctly and its service life can be prolonged. Damage or malfunctions resulting from failure to follow the installation and operating instructions are not covered by the warranty of the manufacturer, and the manufacturer will not assume any related responsibilities.

● **Warning matters**

- When the clothes dryer is working normally, please do not unplug or switch the power. When the machine is not used or cleaned, please unplug the plug, and do not pull the power cord. Do not use wet hands to plug the power cord.
- The clothes dryer cannot be installed in open air and humid environment. If the clothes dryer is accidentally drenched with water or water leaks into it, it shall be ventilated and dried before use.
- Wet clothes should be spin-dried before being placed in the tumble dryer. In order to prevent water from dropping to electrical parts, which will damage the clothes dryer and cause danger.
- Please put the clothes dryer in a well-ventilated place to avoid other accidents.
- When the clothes dryer is working, don't use flammable sprays near it. When gas or flammable gas leaks, don't unplug the power plug or turn machine on or off.
- It is not allowed to dry clothes with flammable detergents, dry cleaning solvents, gasoline, banana oil and other chemicals.
- Don't disassemble, repair or refit the machine by yourself.
- When the clothes dryer is working, for safety, unattended children or disabled people are not allowed to use this machine.
- Do not use this clothes dryer when there is water on your hands and feet.
- Do not dry the raincoat, bicycle cover or other items containing rubber or similar elastic materials with the clothes dryer.

WARNING

● **Warning matters**

- Don't put anything hot or heavy (such as a pot with hot water) on the clothes dryer.
- Do not store cigarettes, lighters, dry ice, gasoline or other inflammable and explosive materials in the clothes dryer.
- The door of the clothes dryer can only be opened after the procedure is finished. Don't open the door forcibly before this so as to avoid scalding human skin due to overheating of the clothes dryer.

● **Warning signs of clothes dryer**

Do not tumble dry garments that are marked as not suitable for tumble drying.

● **Safety matters**



In order to prevent damage to the personal and financial safety of you and others, please be sure to avoid the following matters:

- This appliance is a Class I electrical appliance.

1. A grounded power must be used, and the ground wire shall be directly buried in the ground, and it cannot be connected with utilities such as water pipes and gas pipelines.

2. Ensure that the cross-sectional area of wires of power system can meet the requirements of the normal electrical load.

3. Make sure to use the special socket separately for the machine.

For the safety of you and your family, if the electricity in your home does not meet the above requirements, it is strictly prohibited to use the machine.

4. In order to prevent errors in the installation and use of the socket and ensure the safety of electricity utilization, it is necessary to install the socket and connect the ground wire by the personnel with electrician knowledge.

5. If it is found that the power cord is damaged, the replacement of the power cord must be carried out by professionals.



● Safety matters

6. Never connect the ground wire with the Live wire (L) or the Neutral wire (N), otherwise, the shell will be electrified, which will easily lead to the risk of electric shock.

7. When the clothes dryer is no longer in use, it is best to unplug the power plug from the socket to ensure safety.


8. This machine uses alternating current. When the voltage is within 10%, this machine can be used normally.

9. If a residual current device (RCD) is used, ensure that the plug and socket are compatible.


- For safety reasons, please use the original parts and accessories provided by the manufacturer. If the clothes dryer can no longer be used, please cut off the power cord and destroy the door hook. Waste electrical appliances should be disposed of in the designated processing center.
- If the material of clothes is not suitable for drying by the clothes dryer, do not use this clothes dryer for drying.
- Don't dry unwashed clothes.
- Do not operate the appliance in environments containing combustible dust (e.g. coal dust).
- Do not lean on the door of the machine, climb or sit on the clothes dryer.
- If the ambient temperature around the clothes dryer is lower than 0°C, it may cause frost damage.
- Do not let children play with packaging materials.

Product Overview

● Accessories

Steel Bracket	External Drain Hose	Plastic Rack
<small>*Applicable only to models equipped with the drying rack and rack holder.</small>	<small>*Applicable only to models equipped with the drying rack and rack holder.</small>	<small>*Applicable only to models equipped with the drying rack and rack holder.</small>
		

● Appliance Parts



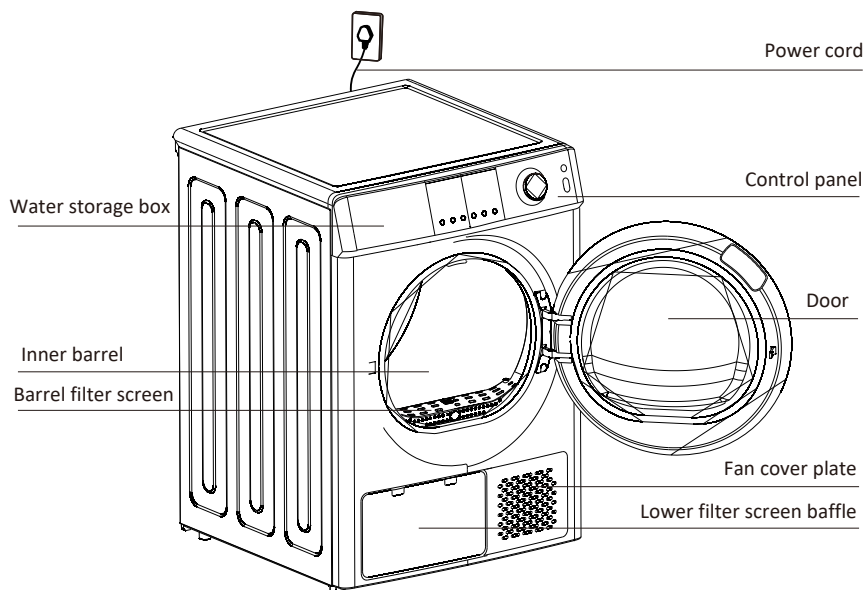


Note: This picture is a schematic diagram, which is only for reference, the machine shall be subject to the actual product.

Installation Instruction

● Install the clothes dryer

1. It is recommended to place the tumble dryer on a firm, level surface.
2. To avoid blocking its fan cover due to dust accumulation, the clothes dryer shall not be put in a place with much dust.
3. Please remove all packages of the clothes dryer, and then place it on a firm and flat surface, not on a blanket or a bracket.
4. When installing, adjust the feet, make the clothes dryer horizontal. Do not fill the gap between the feet and the floor with plush carpets or wooden strips, so as not to interfere with the operation of the machine.
5. Note that the installation position shall be at least 5cm away from other furniture or walls.

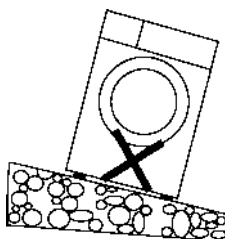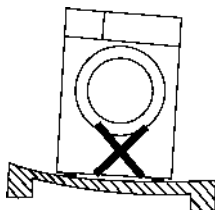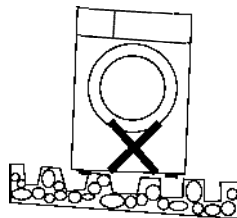


● Level adjustment

By adjusting the feet, place the clothes dryer horizontally.

1. The height can be adjusted by rotating the feet.
2. You can use tools to adjust the height of the feet of the clothes dryer.

Note: Please choose a screwdriver with a diameter less than 4.5mm as the tool for adjusting the feet.

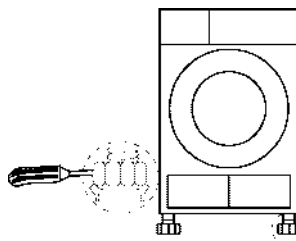

● Connection of power


1. Ensure that the power meets the requirements on the electric nameplate of clothes dryer.
2. Do not use the power strip or universal socket for secondary connection.

Installation Instruction


● Accessories installation

(install them when necessary, the clothes dryer can be used normally without accessories)

(1) Installation of the external drain pipe (install it if necessary, if it is not installed, please use the water storage box)

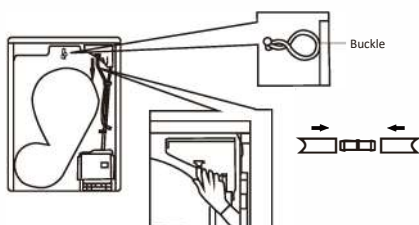

1. Pull out the upper drain pipe downward.
2. Connect the upper drain pipe with the external drain pipe.
3. Fix the external drain pipe on the buckle

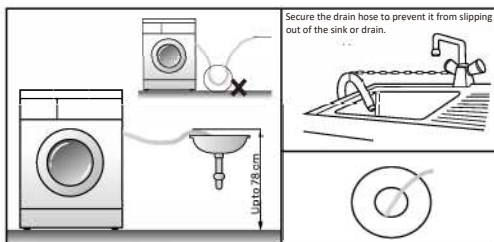


Put the external drain pipe into the sink or floor drain.
(Note that don't bend the external drain pipe)

Attention: Ensure that the drain hose is not blocked or kinked.

Installation Instruction

● Accessories installation

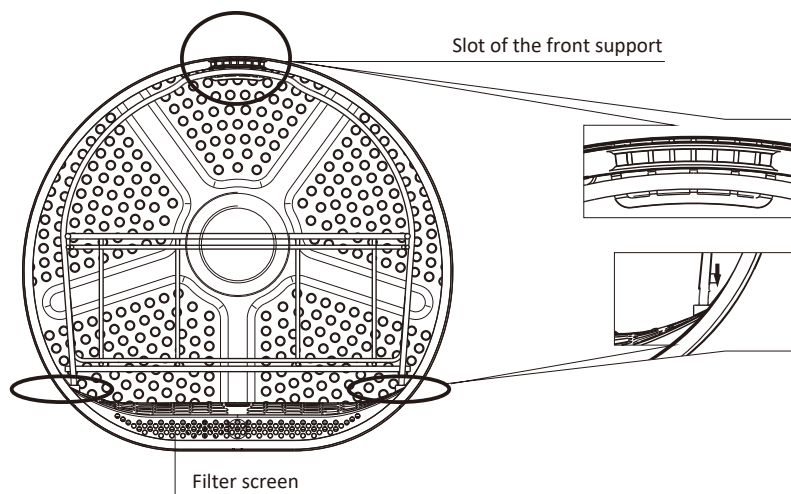


Install the steel bracket according to step 2 first, and then put the plastic bracket on the steel bracket.

*This picture is only for the product with the rack and holder


Quick start

Note: Before you use this machine, please make sure that the machine has been installed correctly according to the installation instructions.

Step 1: Preparation for drying clothes

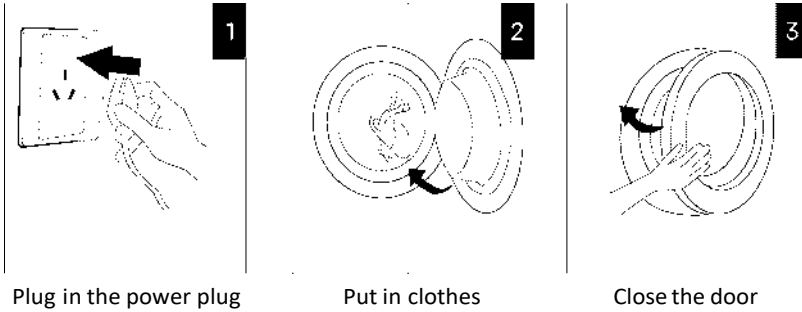


Step 2: Start drying clothes



Step 3: End of drying clothes

When drying is finished, the clothes dryer will have a sound prompt or the word "End" will be displayed on the display screen.

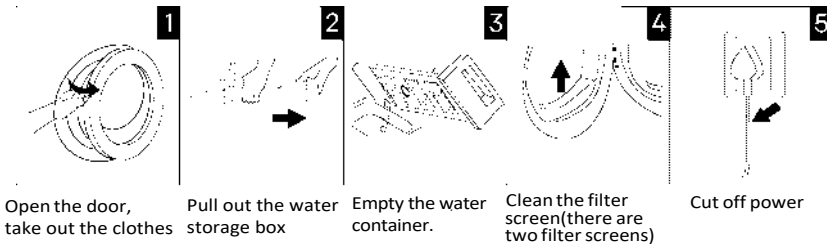


Note:

1. If you are using a socket with a switch, please directly press the switch to turn off power.
2. When pouring the water in the water storage box, pour it directly (without opening other parts).

The Introduction of Function and Program

● Introduction of operation panel functions

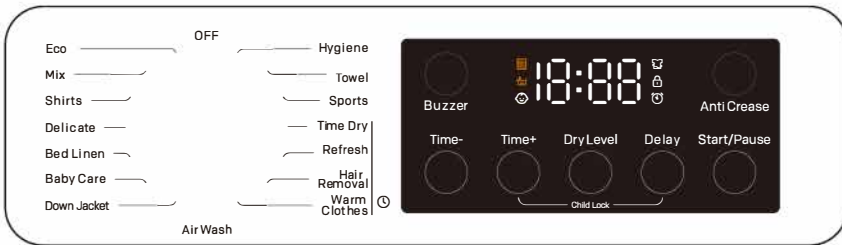

1. Start/Pause button

Press the "Start/Pause" button to start or pause the procedure.

2. Delay

Press the "Delay" button to enter the delay setting, press the "Delay" button again to select the delay time, and then press the "Start/Pause" button to start the delay. The delay time shall be selected after selecting the procedure and before pressing the "Start/Pause" button.

After the delay is started, all buttons except the "Start/Pause" button are invalid.

3. Dry Level

Press the "Dry Level" button to select the degree of dryness. Different procedures have different setting ranges for dryness. As for timing procedure, degree of dryness cannot be selected. There are 3 degrees of dryness: L1(dry) L2(drier) L3(extra dry)

4. Time-, time+

It is used to adjust the clothes drying time. Different procedures have different setting ranges of drying time. In some procedures, it can't choose drying time.

5. Child lock

In order to prevent children from misoperation during the machine operation, the child lock function can be turned on.

During the running of the procedure, press the "Time+" and "Delay" button to enter the child lock state, and the child lock indicator is on. Press the "Time+" and "Delay" button again to release the child lock state, and the child lock indicator goes out. Under the child lock state, all buttons are invalid.

● Introduction of other functions

 Filter screen indicator: Prompt the user to clean the filter screen.

 Water storage box indicator: Prompt the user to clean the water storage box.

- Add clothes halfway: During the drying, press the "Start / Pause" button, then clothes dryer will pause, and you can open the door to add clothes.
- Reservation time refers to the time from the beginning of reservation to the end of drying.
- After the running procedure is finished, if there is no alarm, the End will be displayed, and the music will sound prompt the user. If the User has no operation within 10 minutes, it will automatically switch to the wrinkle prevention procedure. After the wrinkle prevention is completed, the machine will automatically shut down. Under the End state, if you open the door, the machine will directly enter the Shutdown state and sound a prompt.

The Introduction of Function and Program

The following procedures are applicable to 8.0 kg models:

Name	Capacity (kg)	Introduction
OFF	--	Shut down the clothes dryer
ECO	8.0kg	Dry cotton fabric
MIX	4.0kg	For the fabric blending cotton fabric and synthetic fabric
Shirts	1.0kg	Used for drying shirts
Down Jacket	1.5kg	Used for drying down-filled coat/duvet
Delicate	3.0kg	Silk and other clothing that is not resistant to high temperatures
Hygiene	<3.0kg	For the clothes stored for a long time, carry out sterilization treatment
Time Dry	--	Timed procedures
Warm clothes	A little	Timing procedure / warm the clothes
Bed Linen	4.0kg	Used for heavy loads such as sheets
Baby Care	1.0kg	Drying baby cotton fabric clothes
Air Wash	A little	Tumbles with just warm air
Towel	3.0kg	Drying Towels
Sports	A little	Timed Procedures / Breathable clothing such as sportswear
Refresh	A little	Timer procedure/Deodorization Freshness
Hair Removal	A little	Timer procedure / cleaning lint

Note:

1. The above procedures are the recommended procedures, and the users can choose appropriate procedures according to their personal habits. If the clothes are not completely dried, the users can choose the timing adjustable procedure to continue drying.
2. The timing adjustable procedure will not automatically judge the degree of wetness. If the clothes are still wet after the procedure finishes, please repeat the procedure or adjust the drying time until the clothes are dried.
3. Large fabrics such as sheets or curtains are easy to be wrapped into a ball when drying. If so, stop the clothes dryer, take fabrics out and shake them, and then put them into the clothes dryer to continue drying.
4. When drying down-filled coat, before drying, please turn the inside of the clothes to the outside.
5. The time when the machine starts is the default time. In the actual operation, the temperature and humidity of the environment, the type and weight of clothes will affect the drying time. When the machine is running, the humidity sensor intelligently senses the humidity of clothes and automatically adjusts the drying time. The display time of the corresponding LED screen will increase or decrease synchronously, which is normal.
6. The procedure with ⌚ icon indicates that the procedure is a timing procedure, and it will stop when the running time ends.

Instruction for use

● Preparations before drying clothes

Note



After handling, please stand the machine upright for more than 2 hours before using the machine, use a soft cloth to clean the drum before first use

- a) Put some cloth strips in the inner cylinder.
- b) Plug in power and press the "Power" button.
- c) Select the "Timing drying" procedure and press the "Start/Pause" button.
- d) After the procedure finishes, please clean the filter screen according to the content in the "Cleaning and maintenance".



During the operation of the clothes dryer, the compressor and drain pump will generate some sounds, and it is normal.

● Tips for Using the Clothes Dryer


1. Please dehydrate the clothes before putting them into the clothes dryer. The drier the clothes are after dehydration, the more time and electricity are saved when drying clothes.
2. Please shake the clothes, zip them up, button them up and put them in the clothes dryer; to avoid the zipper or button from making noise during drying, please turn the clothes outside over before putting them into the clothes dryer.
3. Clean the filter screen before starting the clothes dryer.
4. According to the prompt of the procedure name, select the corresponding drying procedure according to the material type and label information of the clothes.
5. In order to get the ideal drying effect, please classify the clothes; and don't dry the clothes with different thickness or different degrees of dryness or wetness at the same time as far as possible.
6. When drying a small amount of clothes, it is recommended to use the timing adjustable procedure.
7. When drying sheets, curtains and other large-sized fabrics, if in the drying process, the fabrics are lumped, the operation can be suspended, and drying can continue after shaking.
8. For the clothes that need to be dried by the clothes dryer, it is recommended to use fabric softener when washing.
9. Some heavy clothes (jeans, big towels, etc.) are difficult to be dried locally because of the material characteristics; if you find that the drying is still incomplete after the end of the procedure, it is recommended to use the "Timing drying" procedure to adjust the drying time.

Service guide

● Cleaning and maintenance

a) Empty the water storage box Steps:

- (1) Hold it with both hands and pull the water storage box;
- (2) Pour out the water in the water storage box;
- (3) Set the water storage box to its original position.

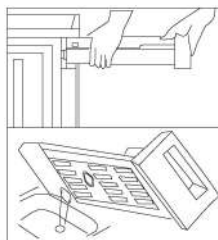

Warning

- Please clean the water storage box after each use. If the water storage box is full of water during the drying process, the procedure will pause, and the water box light on the display will be on. You shall empty the water storage box, then press the "Start/Pause" button to restart the clothes dryer.
- Condensed water is not drinkable!
- Do not use the clothes dryer without the water storage box!

b) Clean the filter screen assembly

The machine has one or two filter screens, it depends on the model. The filter screen shall be cleaned after each use.


Cleaning of barrel filter screen:

Open the door → take out the barrel filter screen → open the barrel filter screen → clean the barrel filter screen → put the barrel filter screen back to the original position.

Cleaning steps:

- (1) Clean the filter screen and vent, remove fluff accumulated on the filter screen and vent, then rinse in running water or clean with a soft brush:
- (2) Ensure that the filter screen is completely dried before reinstalling it.

Barrel filter screen:

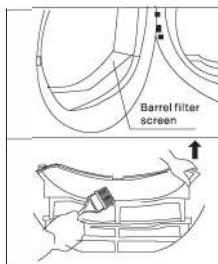

Service guide

• Cleaning and maintenance

Warning

- Too much fluff on the filter screen will block the air circulation, which will delay drying time and increase energy consumption!

- Do not use the clothes dryer when there is no filter screen!

- Clean the filter screen after each use!

c) Clean the heat exchanger

- According to the need, it is recommended to clean the heat exchanger once every month.

Cleaning step:

(1) Open the lower filter screen baffle in the lower left corner of the machine:

(2) Turn the knob and take out the lower filter screen;

(3) Clean the exchanger with a soft brush:

(4) After cleaning, return the lower filter screen, knob and baffle to their original positions.

Note:

1. Do not press it hard when cleaning the heat exchanger, otherwise it will damage the heat exchanger.

2. Disconnect the power before cleaning!

d) Clean the drum clothes dryer

Warning

- Disconnect the power before cleaning!

- Please wear gloves when cleaning.

- When cleaning the surface or other parts of the clothes dryer, use a wet cloth soaked with clean water, otherwise the plastic surface or other parts may be damaged.

- Do not rinse the clothes dryer directly with tap water hose or high-pressure water gun. Cleaning steps:

- Prepare a wet cloth soaked in clean water.



- Clean the door, especially the internal windows.

- Clean the sealing ring around the front support.

- Clean the humidity sensor of the drum.

- Clean fluff in the air duct.

Before starting the machine, dry it with a soft cloth.

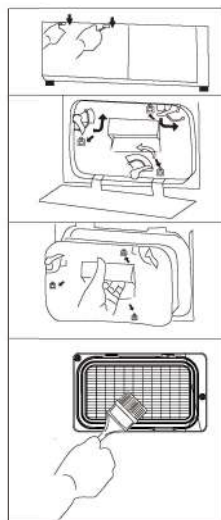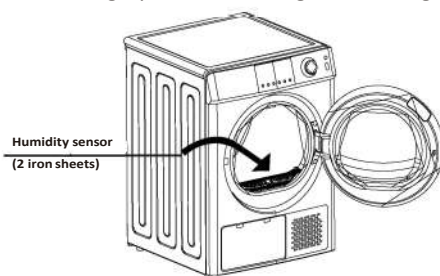

Troubleshooting Guide

● Cleaning and maintenance

Note: The humidity sensor is located inside the drum, below the filter opening. Do not clean the drum with corrosive detergents and do not scratch the humidity sensor.

● Alarm prompt

Alarm prompt	Alarm reason	Solution
OE	The water storage box is full or the drain pump is abnormal	If the fault is not solved after emptying the water storage box, please call the national service hotline
dE	The door is not closed or the door is not closed completely	If the fault has not been solved after closing the door again, please call the national service hotline
LE	The filter screen is not cleaned, or motor is abnormal	If the fault is not solved after cleaning the filter screen, please call the national service hotline
HE	The compressor is abnormal	Please turn off power and call our service number
tE1	Temperature of front air duct is abnormal	
tE2	The condenser temperature is abnormal	
SE	The humidity sensor is abnormal	

Remarks:

When  appears during the machine operation, please check whether the water storage box is full. If so, please empty it and restart the machine. If not, please start the machine directly.

When  appears during the running machine, please check whether the barrel filter screen and the lower filter screen are full. If the filter screen is full of fluff, please clear it and restart the machine; if the fault persists, contact customer service.

Troubleshooting Guide

● Fault phenomena and treatment methods

 Only authorized professional service technicians can repair the clothes dryer!

Before calling the hotline, please confirm whether you can handle the trouble by yourself or the machine is used correctly, the technicians will give you advice when it is within the warranty period.


Problem	Solution
The display does not show any information	Check whether the power or power plug is normal; check whether the power switch is turned on.
The clothes dryer is not started	Confirm whether the door of the clothes dryer is closed. Confirm whether the procedure is selected and the "Start /Pause" button is pressed.
The door opens automatically	Press and hold the door handle, so that the door lock can be locked in the corresponding position. Check whether the clothes are excessive.
The drying standard is not reached or the drying time is too long.	Clean the barrel filter screen and lower filter screen; use a more appropriate drying procedure; ensure that the fan cover is unobstructed

 If you can't eliminate the fault, please:

1. Turn off power of the clothes dryer.
2. Call our service number.

Specification

Model	MDR-12608-WH
Maximum drying capacity (kg)	8.0
Rated power (W)	650
Product size (w*d*h) (mm)	595*615*850
Refrigerant	R290
Filling amount of refrigerant (g)	See nameplate

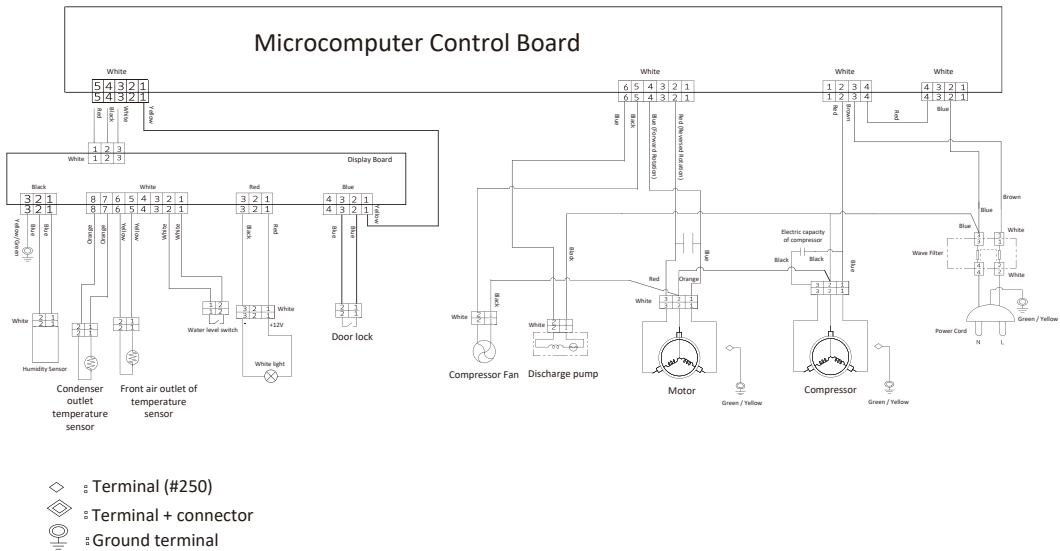

mawa®

Imported by
 LEFEX GmbH
 Parking 49a
 68159 Mannheim
 Germany

